

moda

INSTRUCTION MANUAL

Jazz

Oil-filled Portable Heater



PLEASE READ AND SAVE THESE INSTRUCTIONS



Contents

1. Symbols.....	2
2. Warnings & Precautions.....	2
3. Technical Information.....	6
4. Installation	6
4.1. Fixings.....	6
4.2. Attaching the castor wheels.....	6
4.3. Using your Moda Jazz.....	8
4.4. Instructions for use.....	9
5. Cleaning.....	9
6. Warranty	10
7. Disposal.....	11
8. Manufacturer Information.....	11

1. Symbols



This symbol indicates a hazard with an average risk level which, if not avoided, could result in serious injury or death.



This symbol indicates danger to the life and health of persons due to electrical voltage.



This symbol located on the device indicates that it is prohibited to place objects (such as towels, clothes etc.) above or directly in front of the device. To avoid overheating and fire hazards, the device must not be covered.



This symbol located on the device indicates that its surfaces are hot during and immediately after operation. Hot surfaces should not be touched: danger of burns.



This symbol located on the device indicates that it is prohibited to spray the device.



This symbol located on the device indicates that instructions in the operating manual must be observed when installing and using the device.

2. Warnings & Precautions

Read this manual carefully before using or installing the heater. Always store the manual in the immediate vicinity of the heater or its site of use.



Read all safety warnings and all instructions.

The heater should only be installed and used according to the instructions in this manual. Failure to follow the warnings and instructions may result in electric shock, fire, serious injury, or all of the above.



Save all warnings and instructions for future reference.



Some parts of this product can become very hot and cause burns. Do not touch the surface when in operation. Do not install close to curtains or other combustible materials. Particular attention should be given where children and vulnerable adults are present.



Never cover the heater. Covering the heater risks overheat and fire.



Children of less than 3 years should be kept away unless continuously supervised. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children aged from 3 years and less than 8 years shall not plug in, regulate, or clean the appliance, or perform maintenance.



This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Keep the power cable away from all hot parts of the appliance.
- Do not use the heater with the power cable wound up. This can cause a dangerous build up of heat. Do not wind the cable around the appliance as this may cause weakening and splitting of the insulation. The power cable should be fully unwound and removed from any storage areas before use.
- Prior to each use of the device, check that the cable, mains plug, casing and element are intact and in good condition. The heating element may be damaged if the heater is dropped or hit. Do not use if you detect damage to any component.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.
- Make sure that the voltage indicated on the rating plate for this appliance corresponds to your power outlet: AC 220–240V, 50/60Hz.
- Check for transportation damage and make sure all parts are complete after the appliance is unpacked. Do not use if any parts are missing or damaged.
- Do not leave the heater unattended during use.
- Do not use the appliance with an external controller. The heater must not be set to switch on when it is unattended.
- It is recommended to plug the device directly into a wall socket. Use of extension leads is not recommended because many models do not support high-powered appliances. Make sure any extension lead used can safely support the power requirements of the product.
- Do not share the heater's socket with other appliances: risk of fire due to excessive load.
- The power cable should not be positioned under the carpet or items of furniture. Do not run the cable where it will be a trip hazard.
- The device must not be located immediately below an electrical socket outlet.
- Do not use this device in the immediate surroundings of a bath, shower, swimming pool or any other water container. Risk of electric shock. This product is not suitable for bathroom use.
- The device must be placed where the switches and controllers cannot be touched by a person in a bathtub or shower. Never place the device where it may fall into a bathtub or other water receptacle.
- Do not use the device with wet or damp hands.
- No part of the appliance should be submersed in any type of liquid.
- Cleaning should be carried out using a damp cloth only. No abrasive chemicals or materials should be used.



- Never insert fingers or other objects or body parts into the heater's protective grill: risk of electric shock or injury.
- The device must only be installed in an upright position on a smooth, stable, heat-resistant surface.
- The device is for indoor use only. Do not use outdoors.
- Make sure the minimum safety distances from walls and objects stated in the installation instructions are observed at all times. This is very important to prevent damage to walls, furniture and soft furnishings and to prevent the product overheating. 
- Do not use the device in rooms where contact with flammable or potentially explosive materials like dust, gas or vapour cannot be avoided. Risk of fire.
- Do not operate the device when wet. If the device gets wet during cleaning, allow it to dry out before using.
- Do not expose the device to water jets. 
- Do not transport the device during operation.
- Do not sit on the device.
- Before carrying out maintenance, care or repair work on the device, ensure the device is unplugged. Do not use the cable to tug the plug from the socket. Switch off the socket, hold the plug, and pull.
- Switch the device off and disconnect the power cable from the mains socket when the device is not in use.
- Allow the device to cool down before touching or transporting the device, or attempting maintenance work.

3. Technical Information

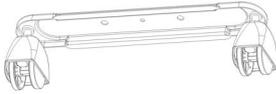
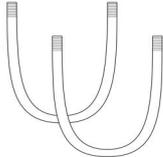
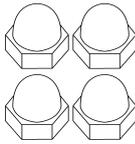
Table 1: Technical Specifications

Voltage	220-240V AC / 50Hz.
Wattage	800W, 1200W, 2000W
IP Rating	IP00
Appliance Class	Class I
Power cable length	1.5m

4. Installation

4.1. Fixings

Before beginning installation, check that all fixings are supplied. The heater should only be mounted with the manufacturer's fixings.

Component	Castor wheels	Wing nuts
		
Quantity	2	2
Component	Arc-shaped Bracket	Dome nuts
		
Quantity	2	4

4.2. Attaching the castor wheels

Warning – Installation requires turning the heater upside down. Ensure the surface is stable and free of objects which may scratch or damage the finish of the heater.

1. Unpack the Castor Wheels and Arc-shaped Brackets from the heater packaging.
2. Turn the radiator upside-down on a stable and clean surface.

3. Hook the Arc-shaped Bracket onto the bar between the outermost fins.
4. Thread the ends of the brackets through the holes in the caster wheels, ensuring that the castor mount is level and the wheels are facing towards the ceiling.
5. Secure in place using a wing nut. The wing nuts can be tightened by hand. Make sure they are fastened on properly and are not overtightened as this may cause damage to the bar.

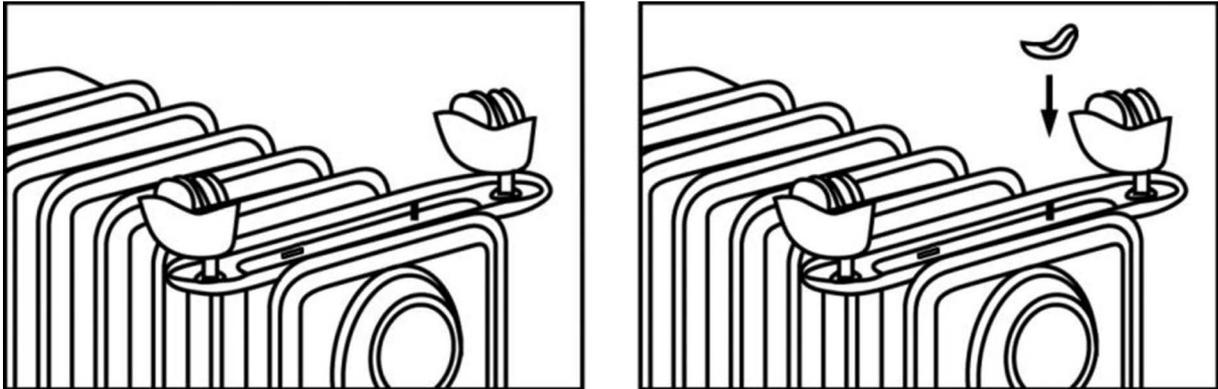


Figure 1: Attaching castors to heater body

6. Repeat for the second set of castor wheels.
7. Turn the device upright so that it is resting on the castor wheels. The power cable should be at the bottom of the heater, not the top.

4.3. Using your Moda Jazz

Do NOT!

- DO NOT use in a bathroom or in the immediate surroundings of a swimming pool or other water container. Risk of electric shock, injury or death.
- DO NOT use in rooms where potentially flammable or explosive materials are present.
- DO NOT use in rooms where the device will be left unattended.
- DO NOT use outdoors.
- DO NOT use the device without properly installing the castor wheel bases.
- DO NOT use if the device is damaged.
- DO NOT cover.
- DO NOT touch the metal fins during or soon after heating.

Do!

- Use for ad-hoc heating in hard-to-heat spaces.
- Ensure the device is unplugged before attempting transportation or maintenance.
- Inspect the heater regularly for damage and cease use if any damage is detected.
- Keep the device away from curtains or other flammable materials.
- Allow the device to cool completely before moving or storing it.
- Unplug and place device in its original packaging if it is not going to be used for a long period of time.

4.4. Instructions for use

Note: This heater features an overheat protection system that automatically turn off the heater if any components overheat.

1. Place the heater on a flat and stable surface before use.
2. Ensure that the control dials are turned off before inserting the plug into the socket.
3. To set the temperature, rotate the top dial clockwise. You will hear a click which indicates the heater is on.
4. To adjust the power level, turn the lower dial clockwise. The highest power level provides the fastest heating. The wattages for each level are as follows from lowest to highest level - 800W, 1200W and 2000W.
5. When your room reaches the desired temperature, turn the thermostat dial anticlockwise until the light turns off.
6. Leave the thermostat at this setting.
7. When the room temperature falls below the desired level, the unit will automatically switch on until it reaches the set temperature.
8. To turn off the heater, ensure the top dial is set to the - symbol and the bottom dial to 0, then unplug from the socket.

5. Cleaning

Always disconnect the appliance and let it completely cool before attempting any maintenance. Use a vacuum cleaner to remove dust on the fins. Clean the outside of the unit with a damp cloth and then dry it with a dry cloth. Never immerse the unit in water, nor let water drip into the unit. Risk of electric shock.



Always disconnect the appliance, let it cool completely, and clean it before storing. If you do not use the device for a long period, wind the cable around the cable storage at the front and put the unit back into the original box with the instruction manual and store in a dry and well-ventilated place. Do not place any heavy items on top of box during storage as this may damage the appliance.

6. Warranty

The Moda Jazz Oil-filled Heater carries a 1-year guarantee on the body, paintwork and electrical components. Within the stated period, starting from the date the customer receives their unit, the supplier guarantees to repair or replace the unit where a fault is due to defects in materials or manufacturing.

The warranty does not cover any defect arising from damage, negligence, usage outside the product's intended purpose or fair wear and tear. The warranty is only valid when the unit has been used at the specified supply voltage, and in accordance with all conditions specified in this manual. The warranty will be void if the heater has been covered, tampered with or opened in any way, or if the ratings label has been removed.

The warranty does not cover failures and faults due to force majeure, accidental damage, mishandling, external impact, chemical agents or atmospheric phenomena, incorrect use of the device, the purchaser's faulty electrical installations, transporting the device or problems caused by the device being handled by unauthorised persons. If the unit has been hardwired, an invoice may be required to confirm the work was carried out by a qualified professional. The manufacturer cannot accept responsibility for damage, loss or injury caused by incorrect installation, maintenance, cleaning or covering the device.

The warranty is a contract with the original purchaser and does not transfer if the unit is re-sold, gifted or inherited. Proof of purchase, including order number and order confirmation or invoice, will be required if a claim is made. The warranty covers only the model of heater shown on the purchase invoice. The warranty covers the repair or replacement of the defective product only and the manufacturer shall have no liability for installation costs or consequential losses however incurred. The unit is sold as a DIY product; whilst hardwiring is permitted within the terms of the warranty – provided evidence can be produced that the work was performed by a qualified installer – no compensations will be offered for the installer's costs in the event of a claim. Claims must be made with the establishment where the device was purchased. This warranty does not affect the customer's consumer rights.

7. Disposal



In accordance with WEEE Directive 2012/19/EU, the icon with the crossed-out waste bin on electrical or electronic equipment stipulates that this equipment must not be disposed of with household waste at the end of its life. You will find collection points for free return of waste electrical and electronic equipment in your vicinity. The addresses can be obtained from your local authority.

The separate collection of waste electrical and electronic equipment enables the re-use, recycling and other forms of recovery of waste equipment, and prevents any negative effects for the environment or human health caused by the disposal of hazardous substances potentially contained in the equipment.

8. Manufacturer Information

The Moda Jazz Oil-filled Heater is an electric heating product produced for Moda Heating and sold through various retailers and distributors. Please contact your supplier for technical advice regarding this product.

For other queries:

Moda Heating – UK

Firecrest House
Lingerfield Business Park
Market Flat Lane, Knaresborough
United Kingdom
HG5 9JA



www.modaheating.com

Moda Heating – ROI

Unit 282
Block G
Blanchardstown Corporate Park 2
Dublin
Republic of Ireland
D15 R65X